

WWW.INFIRE.PL



INSTALLATION CARD
BIO-FIREPLACE INSIDE 900 *weight 14kg*

**INFIRE KAROL LIPKA
UL. OBWODOWA 3
11-500 GAJEWO**

Kontakt:
biuro@infire.pl
infire@wp.pl

THIS DOCUMENT IS PART OF THE DEVICE

INSTALLATION


Please make sure that the set delivered to you contains all the elements, that is:

- fireplace (housing)
- hearth (steel rectangular tank)
- glass and steel mountings for glass panel
- steel long handle for adjusting and extinguishing a flame
- assembly pins


1. Choose the room in which you want to use the fireplace. The room in which the device will be used should have a minimum area of 20m².
2. When using the fireplace in a room, the window must be tilted.
3. The room in which the fireplace is used should always be ventilated, as it absorbs oxygen from the air. Do not install the fireplace in a place where it will be exposed to draught!
4. Place the rectangular steel tank (the hearth) in the rectangular opening inside the fireplace.
5. Insert the glass into the mountings and tighten it from the back using a screwdriver.
6. Do not place any objects on the housing or inside the fireplace.
7. Do not place any flammable materials in a distance of at least 2 m from the device.
8. Convection air slots and rear ventilation should not be obstructed.

1. INSTALATION IN A RECESS (in wall):

1. There should be no heat-sensitive objects above the fireplace as the heat is transferred upwards. The wall in which the fireplace is to be installed should be made of brick or cardboard heat-resistant gypsum (red). It shall not be covered with wallpaper or laminates, nor shall it be of wood or other combustible materials.
2. Make sure that the wall/table/floor on which you place the unit can bear the weight of the device.
3. Insert the frame of the fireplace into the pre-prepared recess.

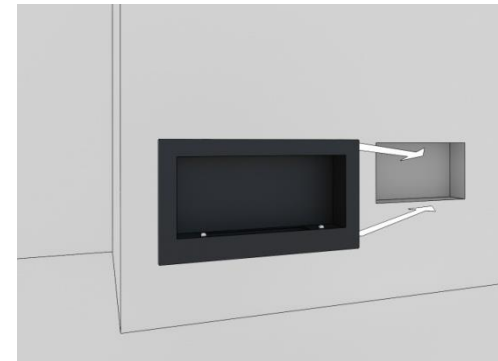


Fix it to the floor using the supplied screws through the holes in the bottom of the fireplace (after installing the pins).

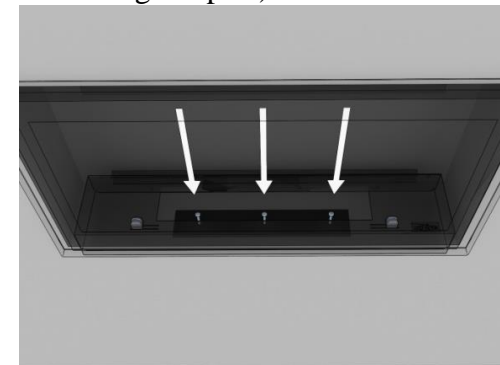

2. INSTALATION ON A WALL

Drill holes in the wall in the size of the mounting pins at the distances corresponding to the distance of the holes in the mounting strip. Screw the skirting board to the wall using the supplied screws and pins. Screw the skirting board evenly in the horizontal position so that the part facing up from the wall is pointed upwards. Place the fireplace on the wall with the strip attached to his back. The strip must be mounted on a stable masonry wall. Place the rectangular steel tanks (the hearth) in the rectangular opening inside the fireplace.

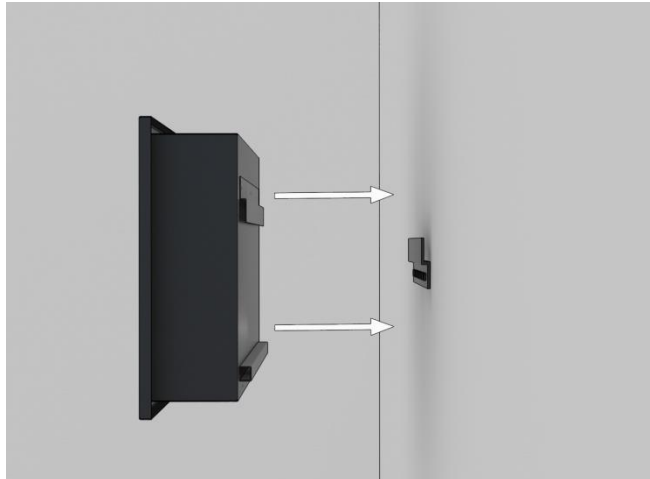

Slide the glass very carefully into the silver fixings at the front of the fireplace. Gently tighten the glass in the fixings by tightening the glasses with the screws on the back of the fixture.



If the silver glass mountings are not attached, they should be screwed into the prepared holes with a screwdriver.

Infire is not liable for damage resulting from incorrect installation of the fireplace or from installation of the fireplace on an unsuitable wall/floor.